



Ring de boxe

7.5 x 7.5 m


www.lecoinduring.com

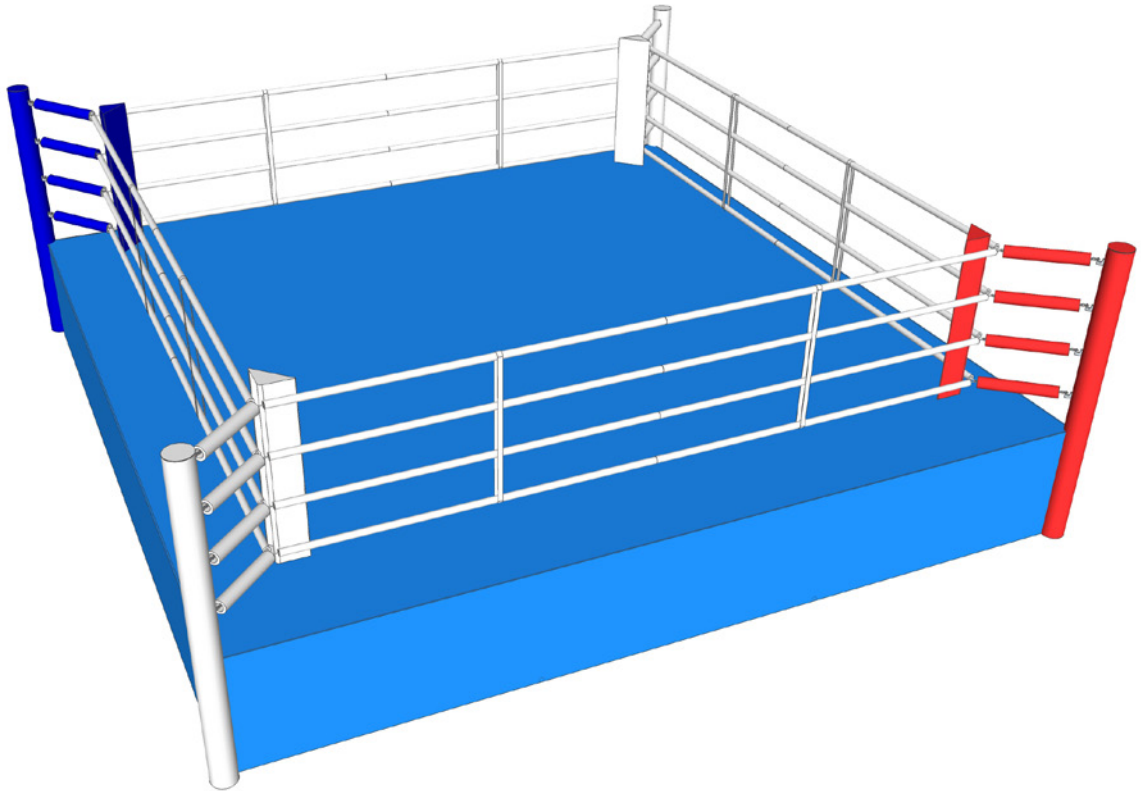


Plan de montage

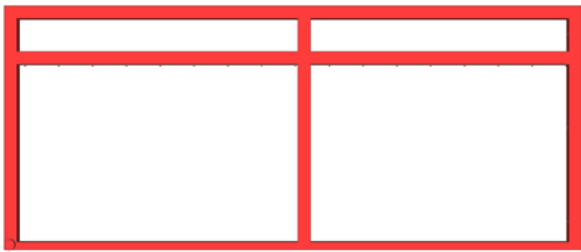

A-L (4 Pcs, rouge)
A-P (4 Pcs, rouge)

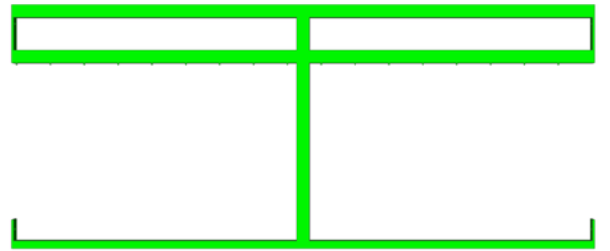


Bh (4 Pcs, Vert)

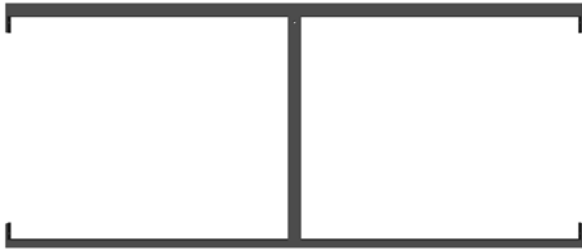


C (4 Pcs, Noir)




B69 (2 Pcs, Grise)

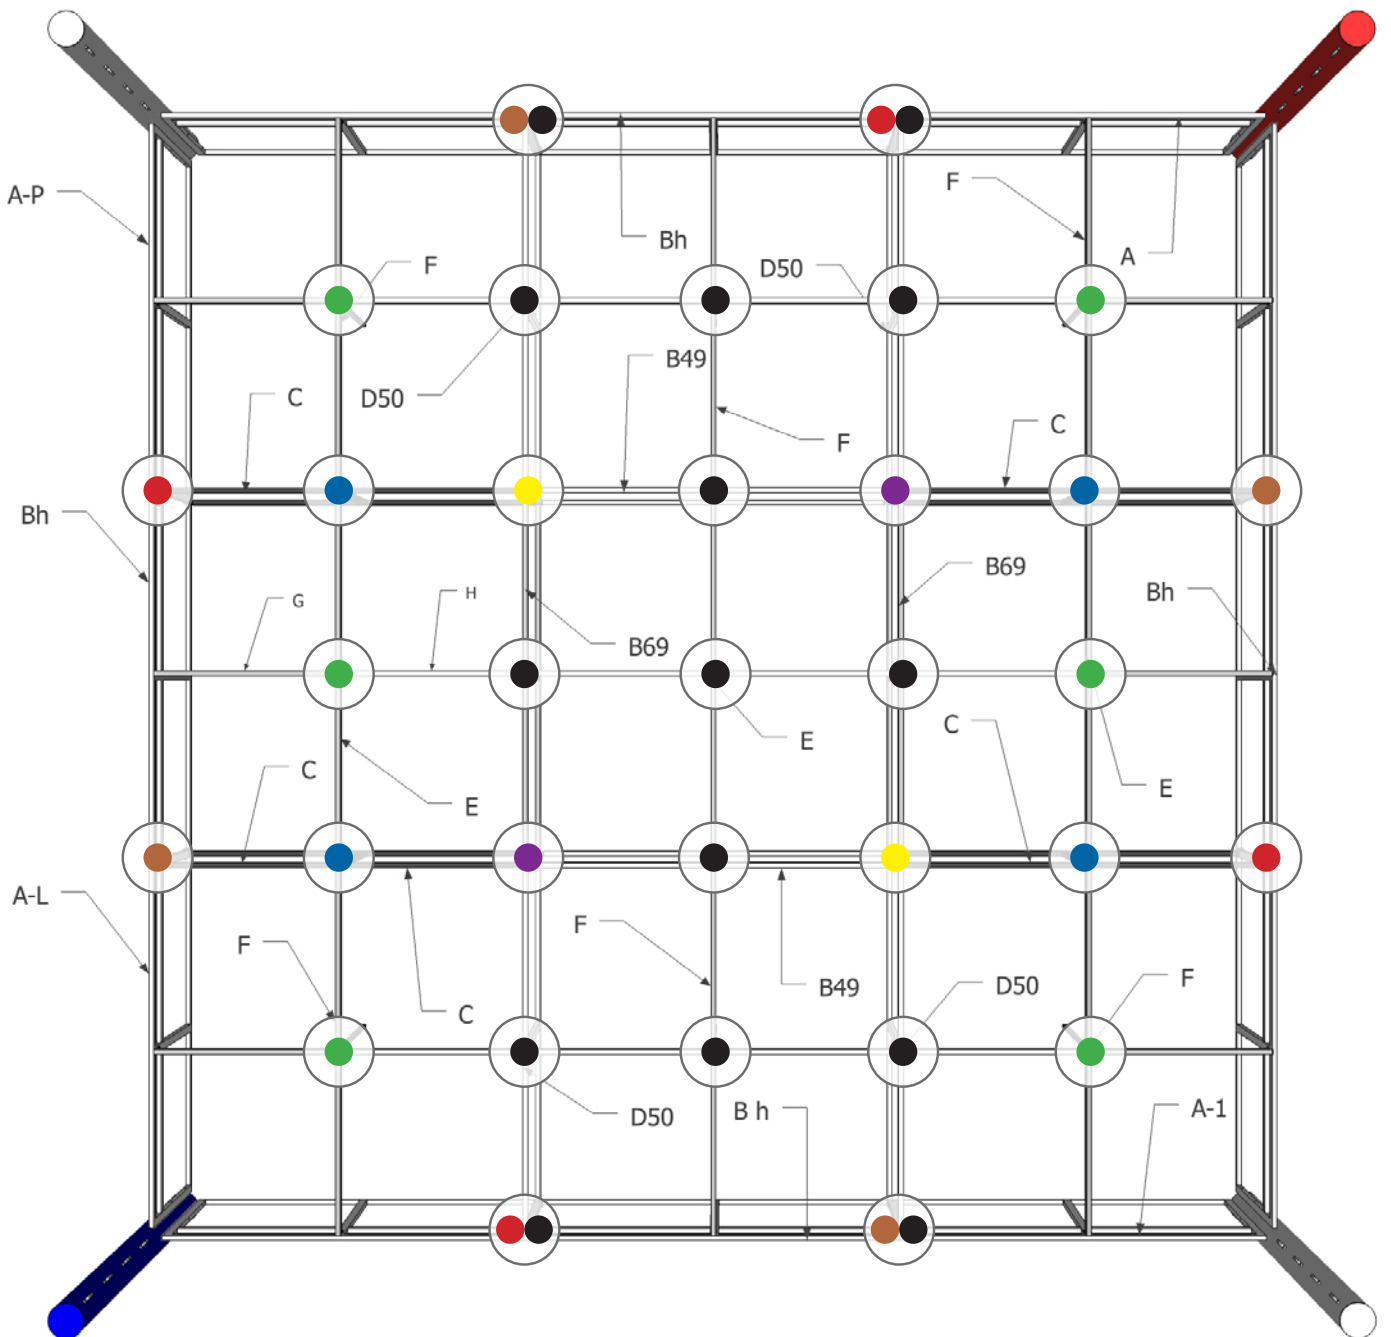

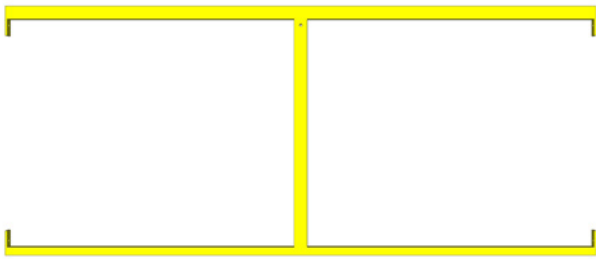


B49 (2 Pcs, Jaune)

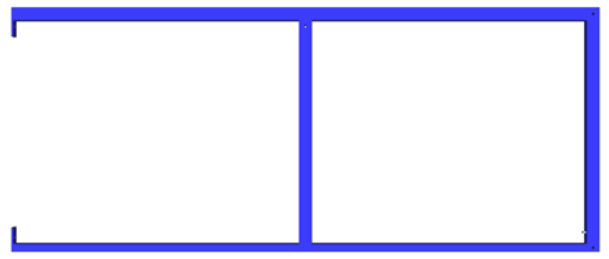

D50 (4 Pcs, Bleu)



E (3 Pcs, grise)

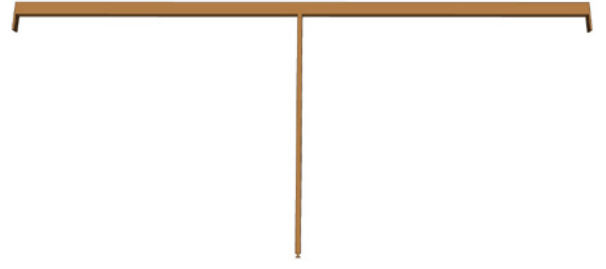


F (6 Pcs, Marron)




G (6 Pcs, grise)



H (12 Pcs, beige)

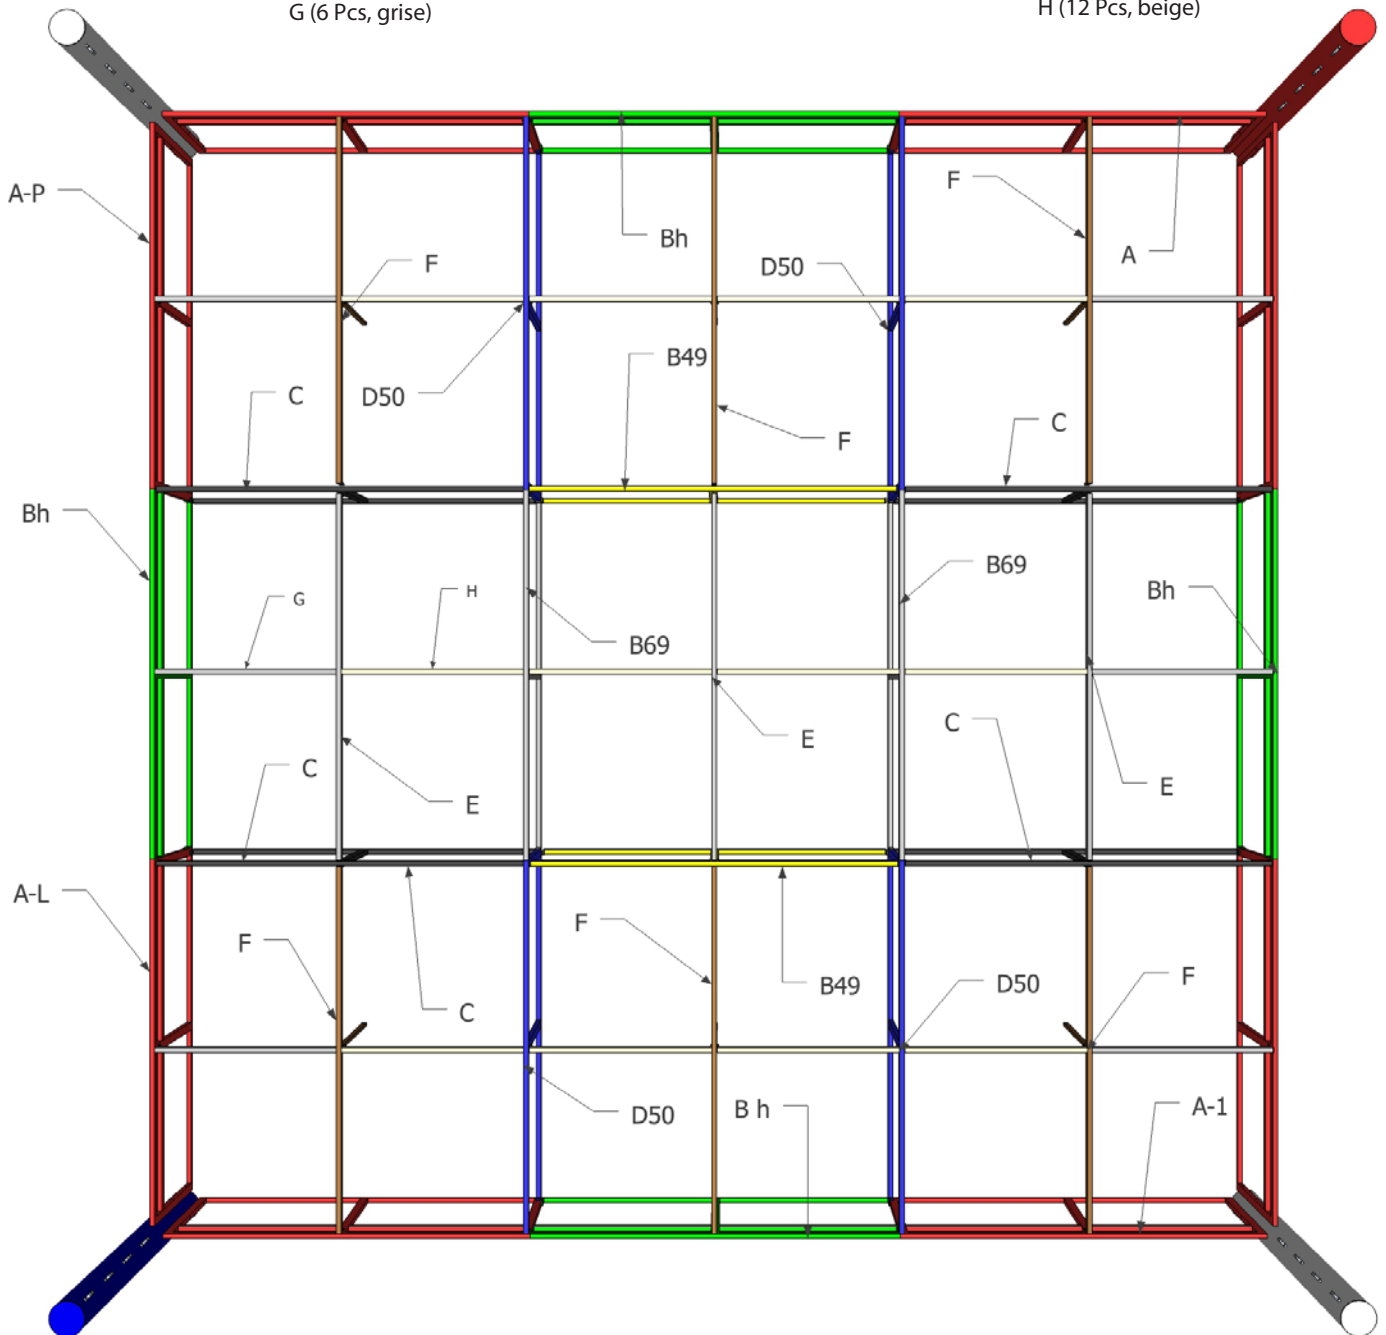


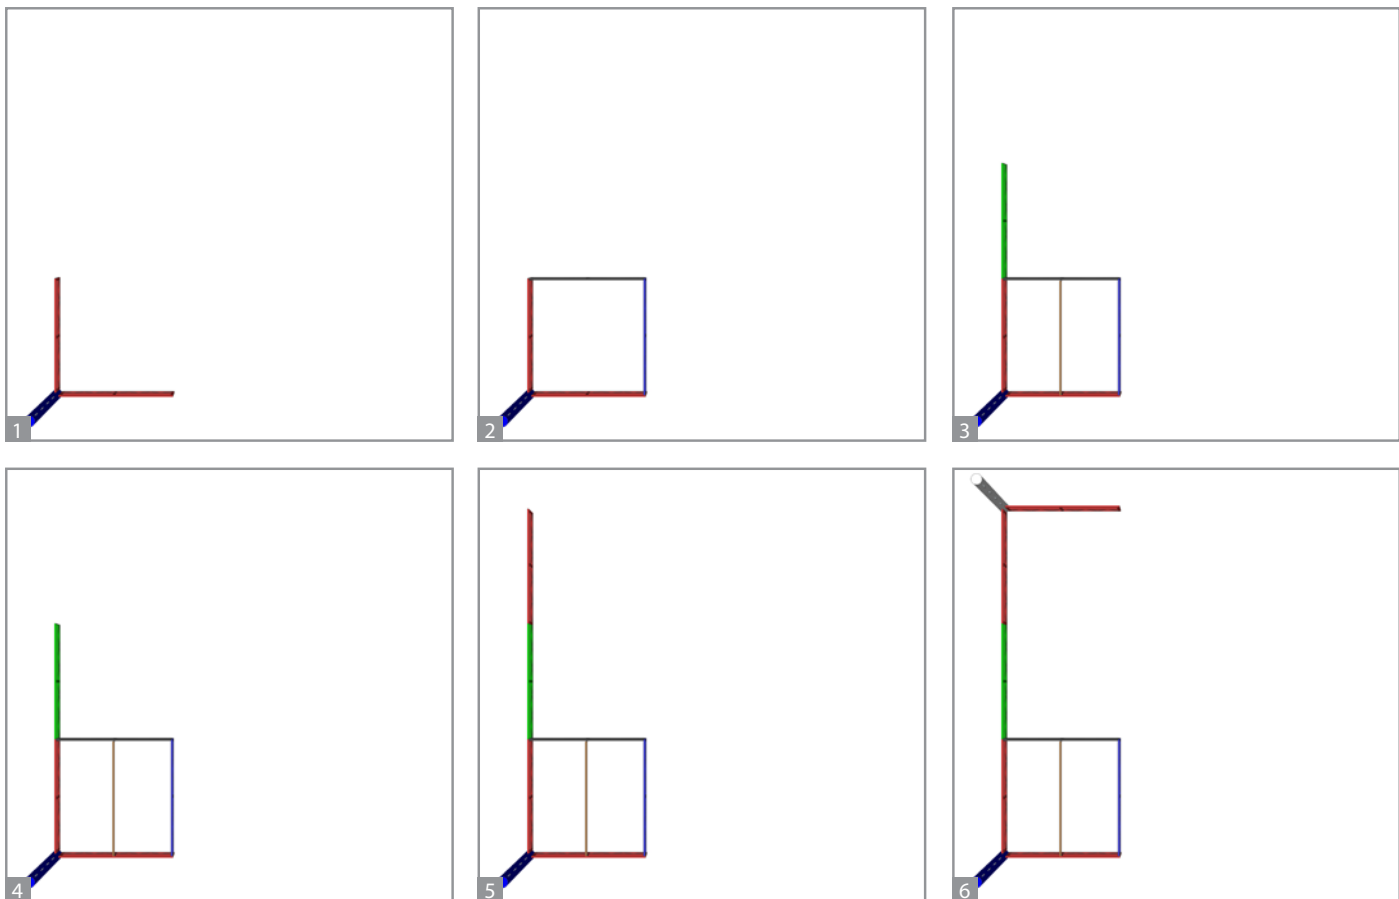


1.


Commencer par 1 coin, jusqu'au second coin, allez jusqu'au troisième puis quatrième comme indiqué sur la photo.




ATTENTION : Chaque pièce est marqué d'une couleur. Les mêmes couleurs vont ensemble comme indiqué sur les photos.

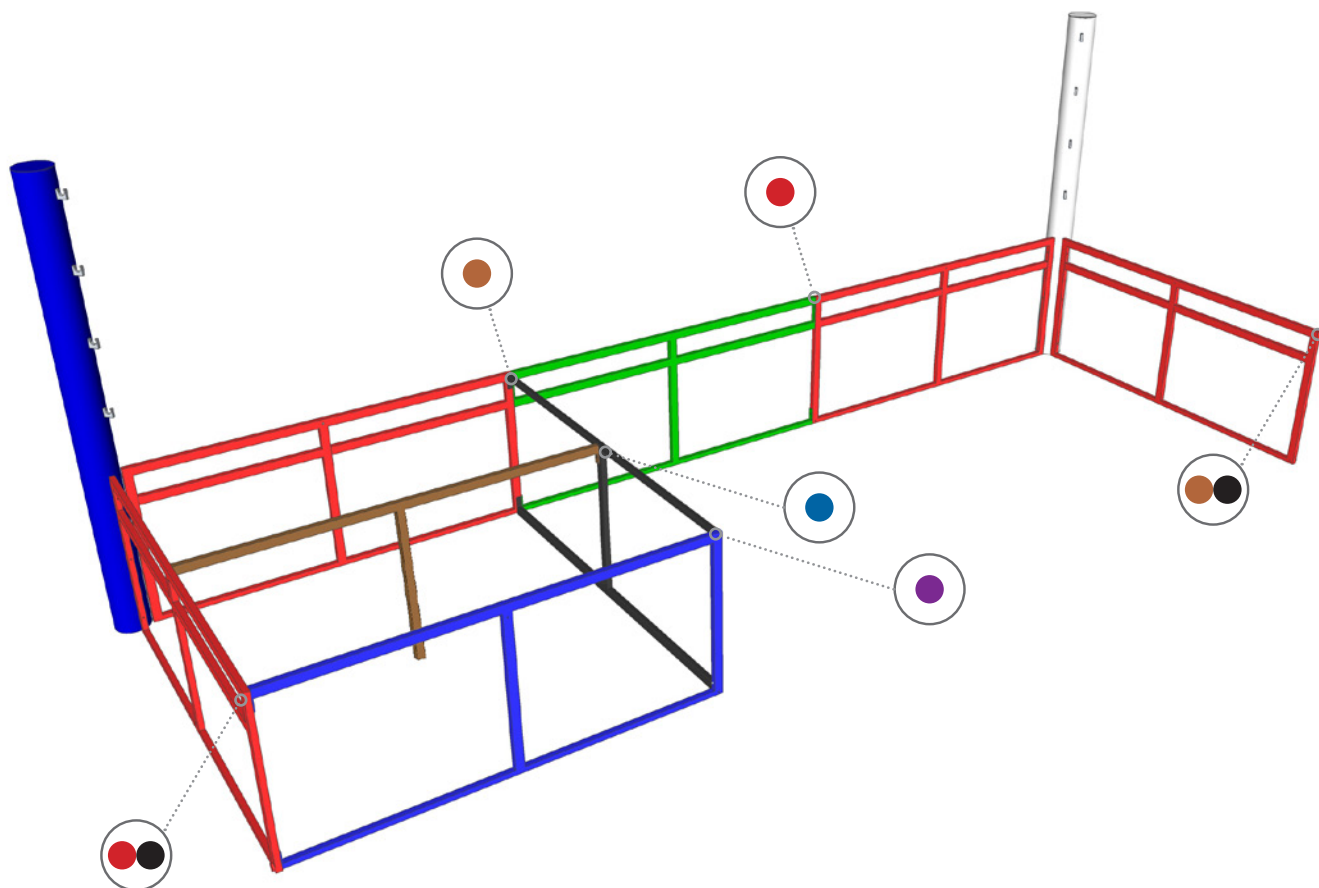

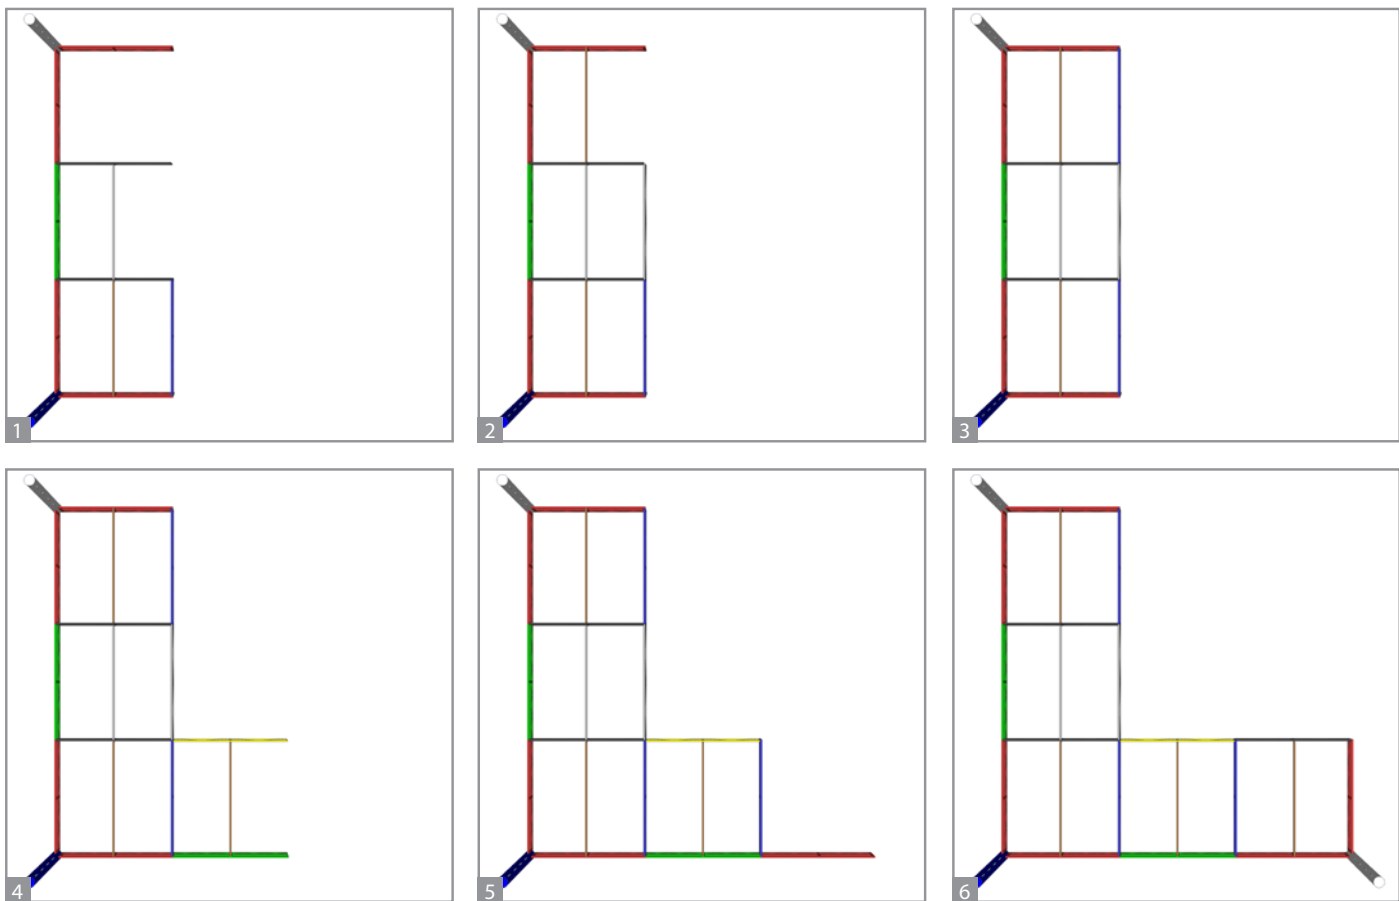








2.

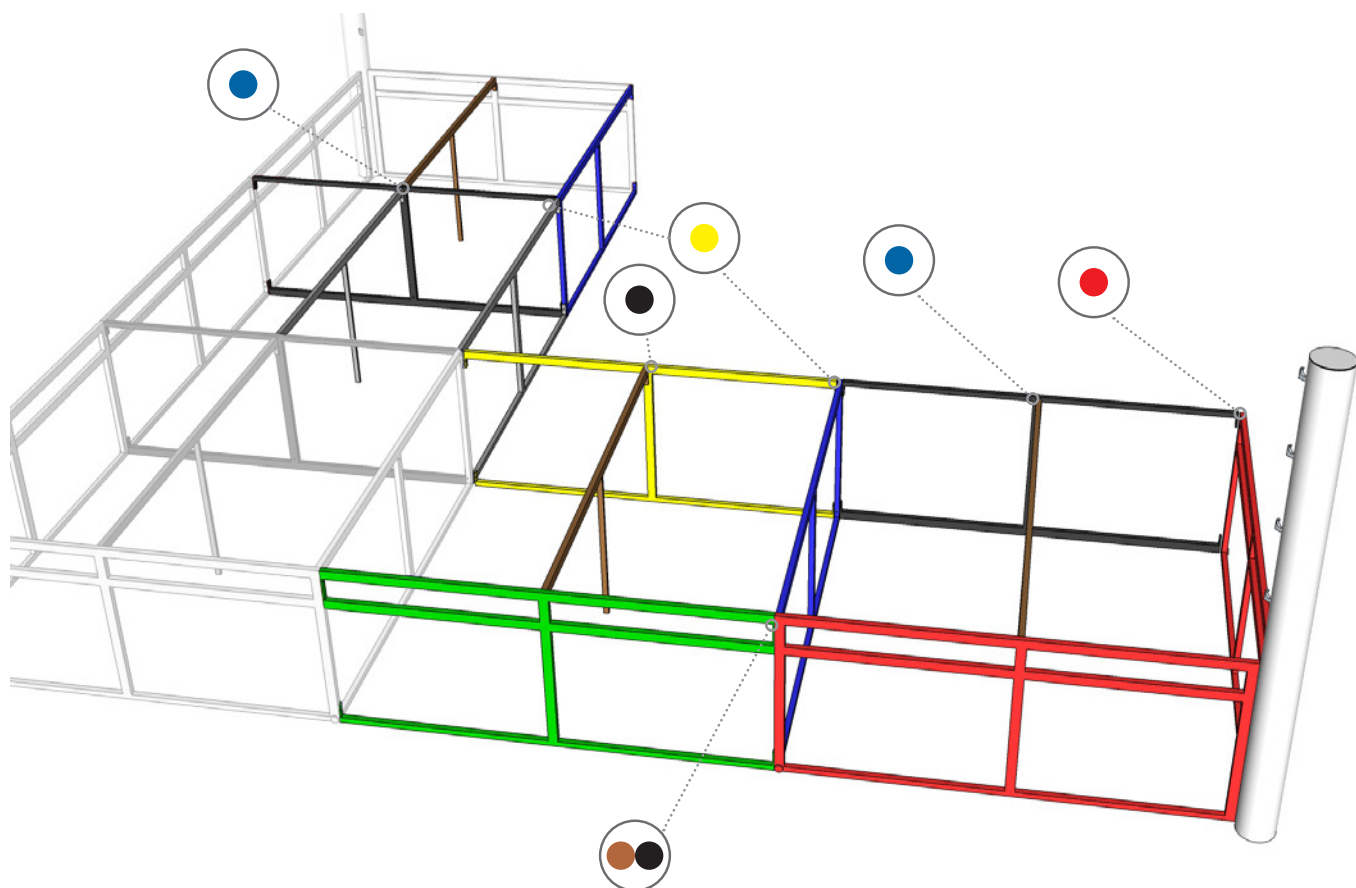

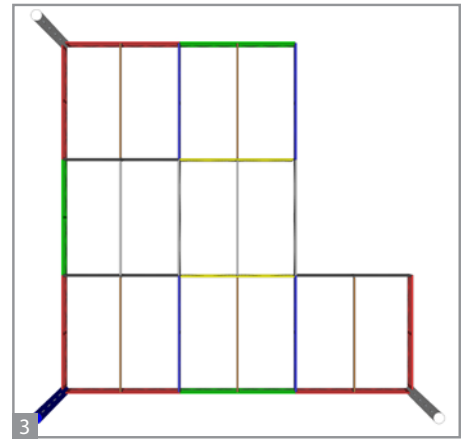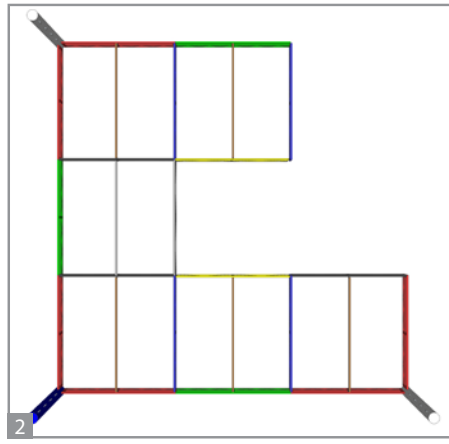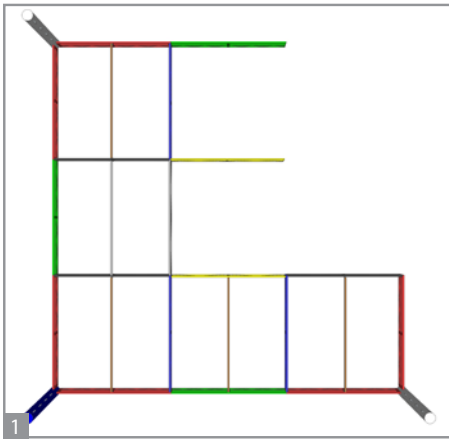



3.

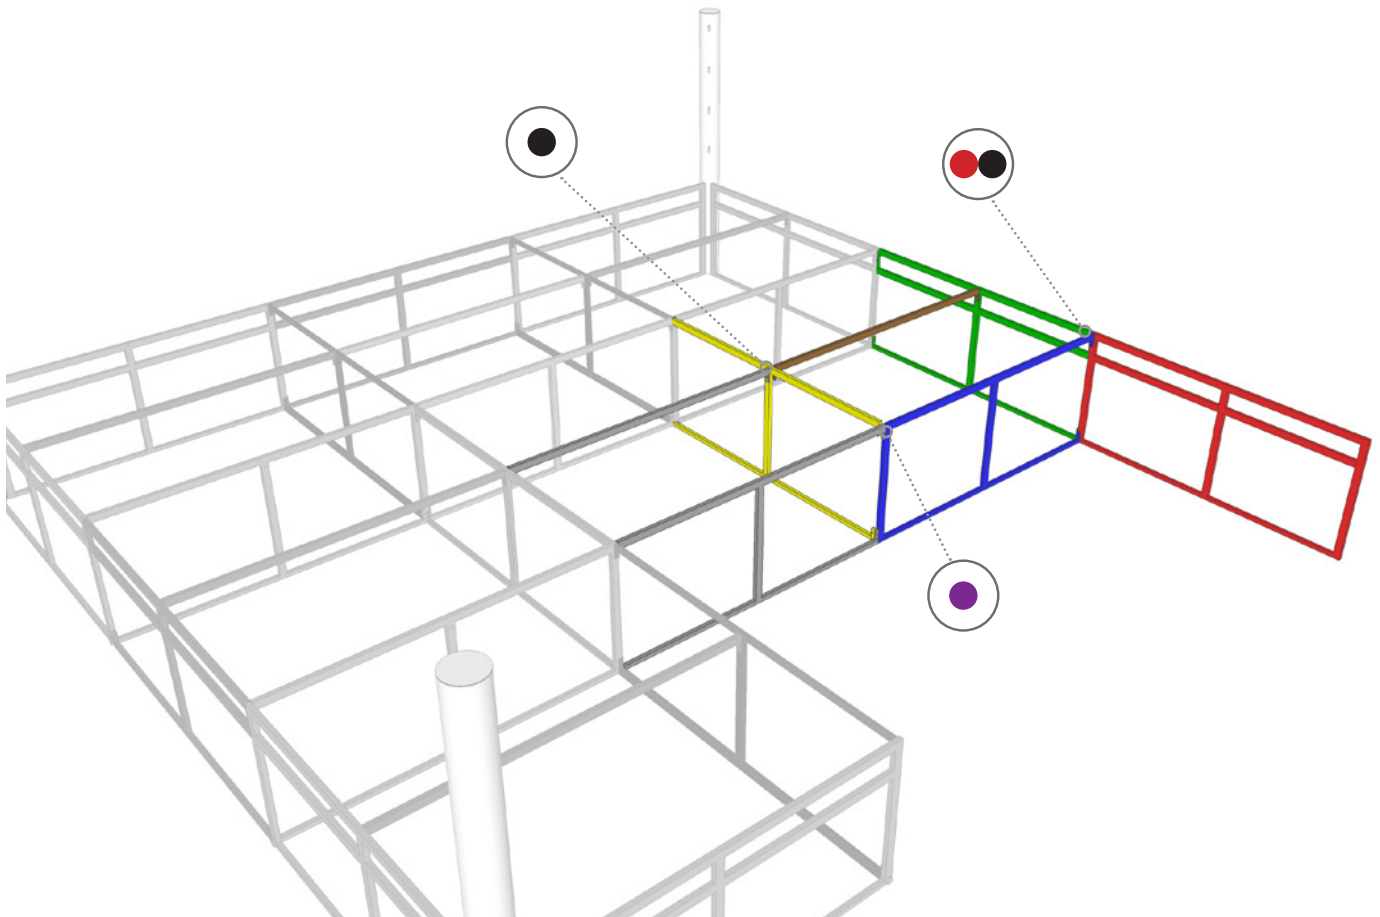

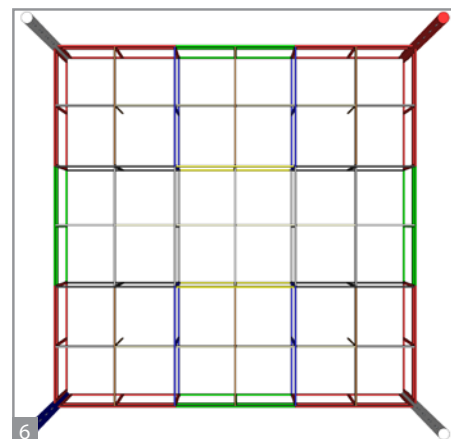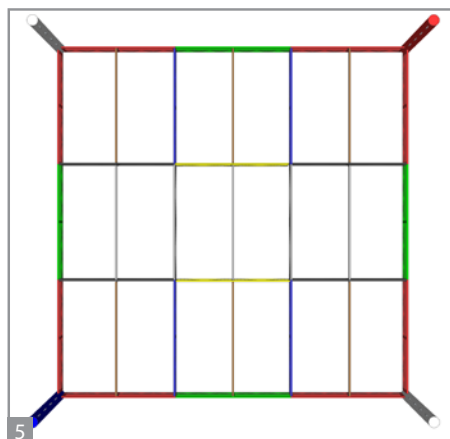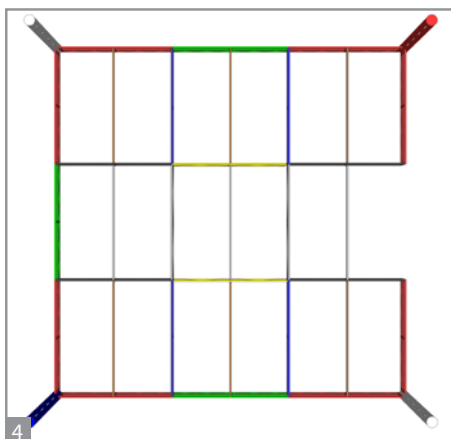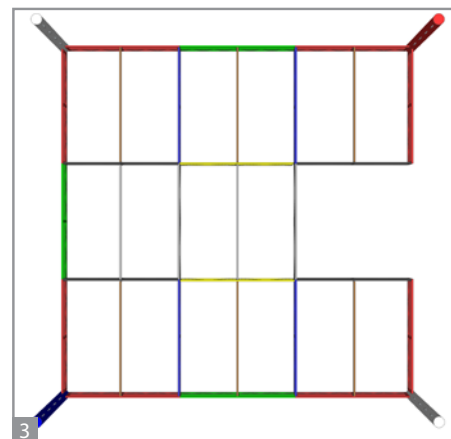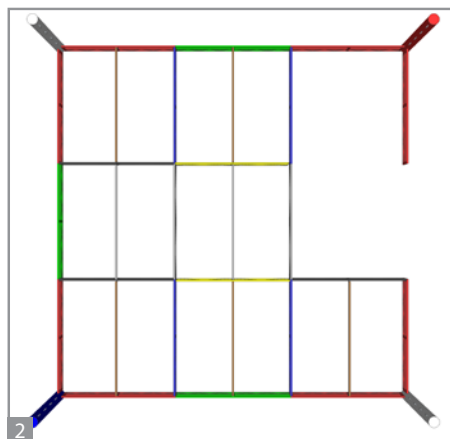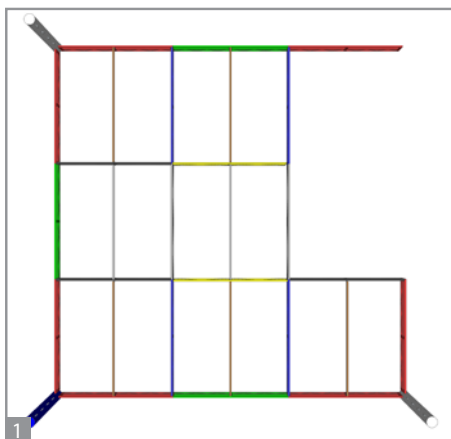


4.

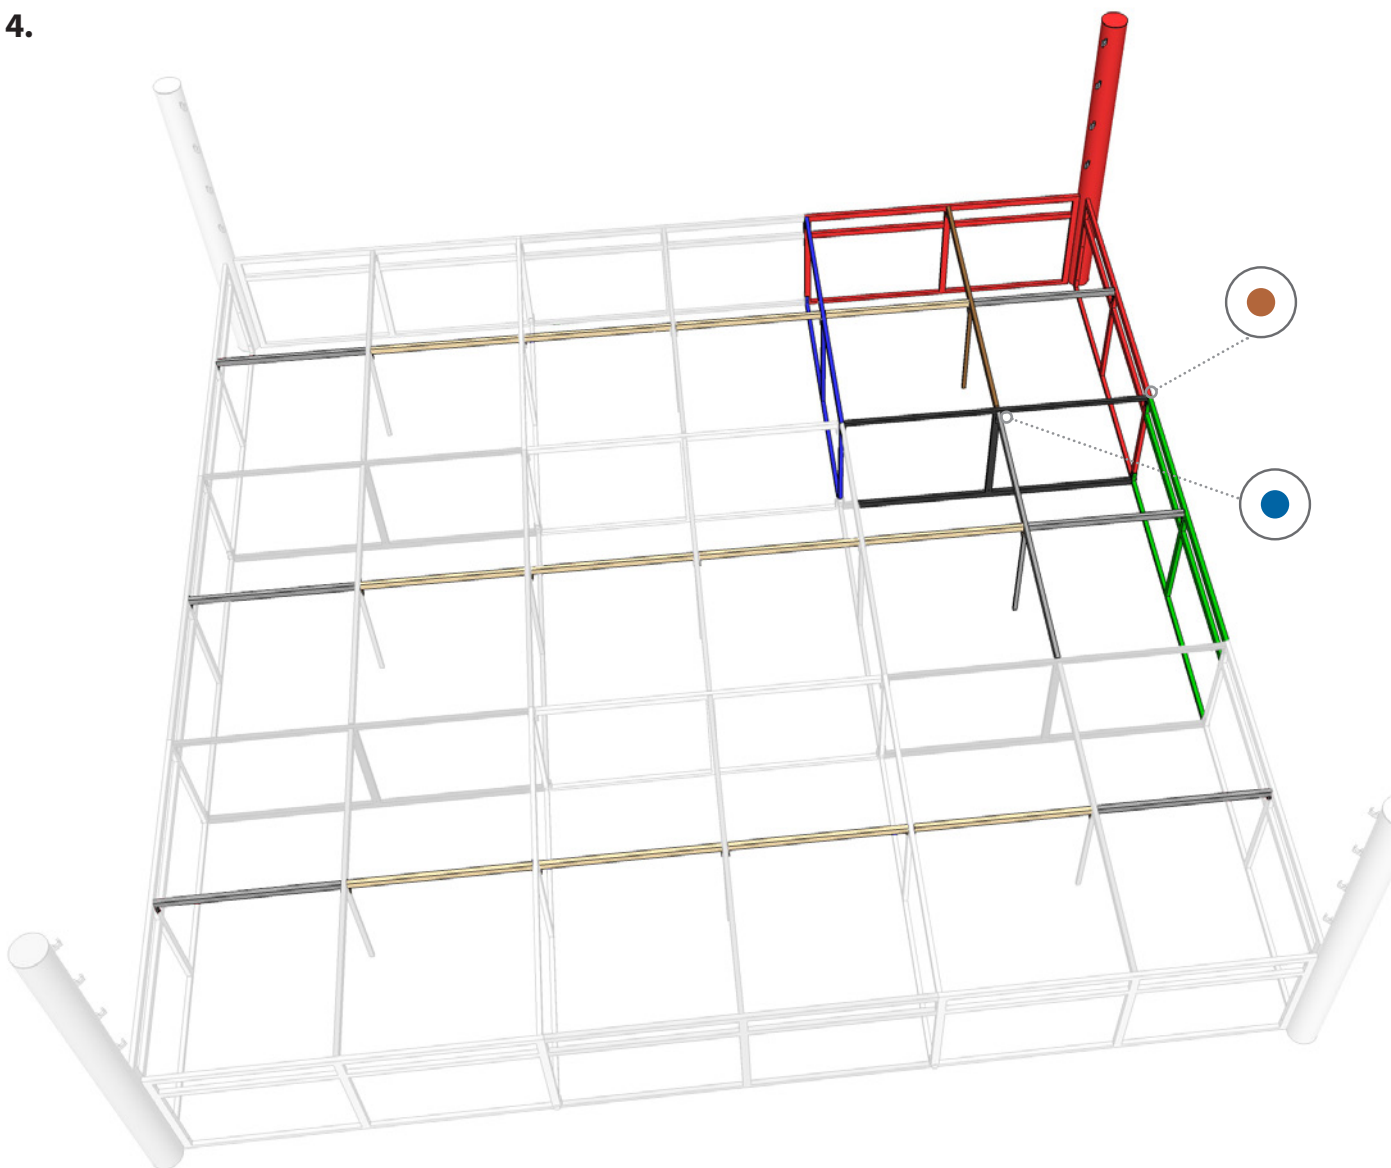

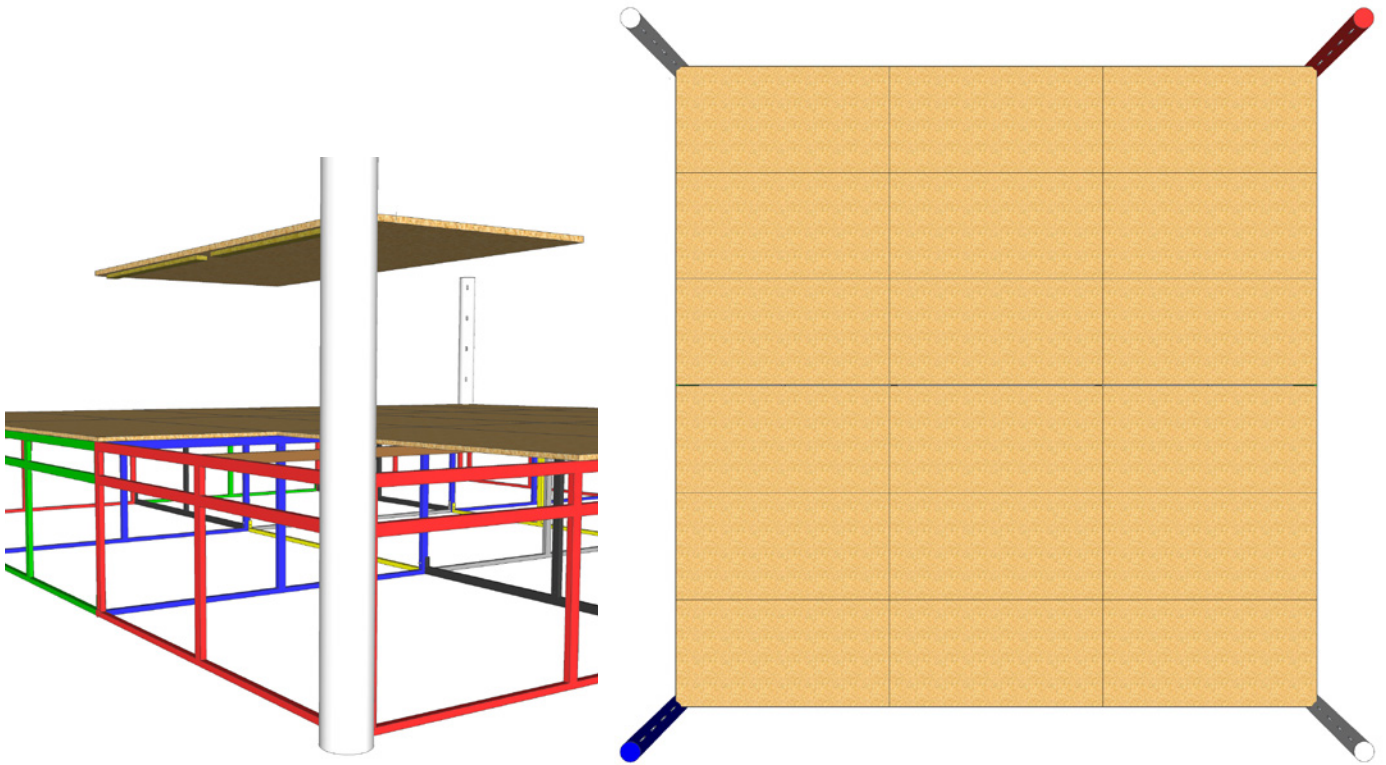


5.

Installez le plancher en OSB comme indiqué sur la photo. Le côté du panneau en OSB avec la bande Noire fait face au sol. Le bord étroit des panneaux OSB doit être installé comme sur la photo. Le petit bloc en bois doit venir butter contre le cadre en acier.

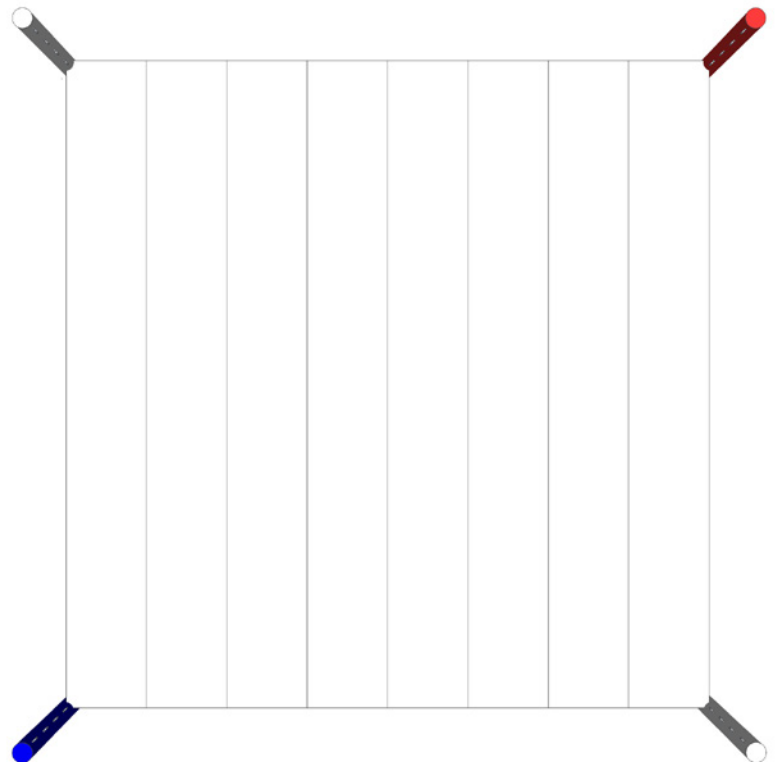


6. Step


Les bandes de mirelons doivent être placées comme sur la photo.

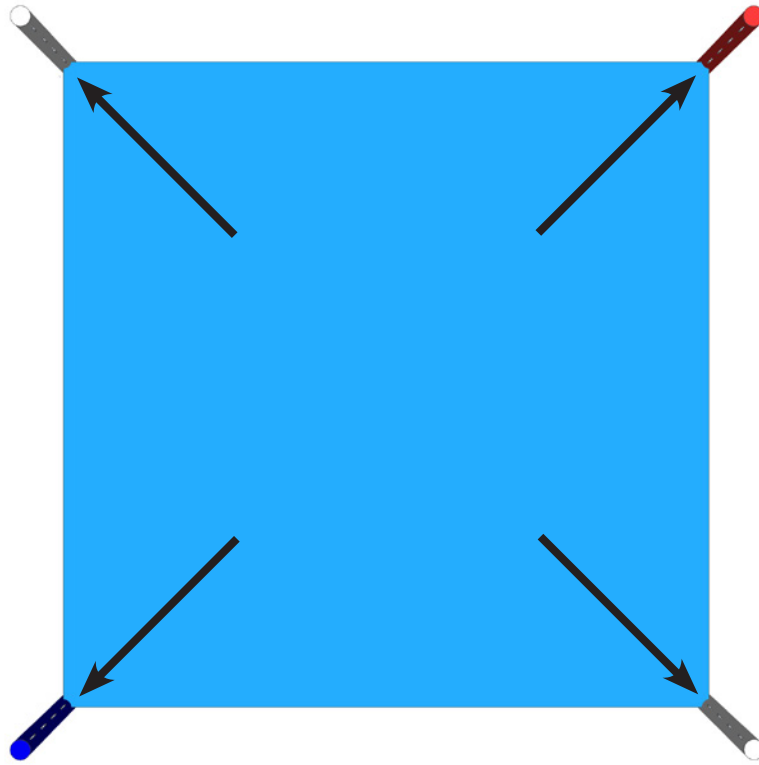

7. Step

The upper horizontal canvas is to be stretched out in 4 directions towards the corners as shown on the picture. The upper canvas is to be attached to the steel frame with string which is a part of the canvas. The side vertical canvas is to be attached after the installation of the upper canvas is finished. The side canvas is to be attached with velcro located on both upper and side canvases.

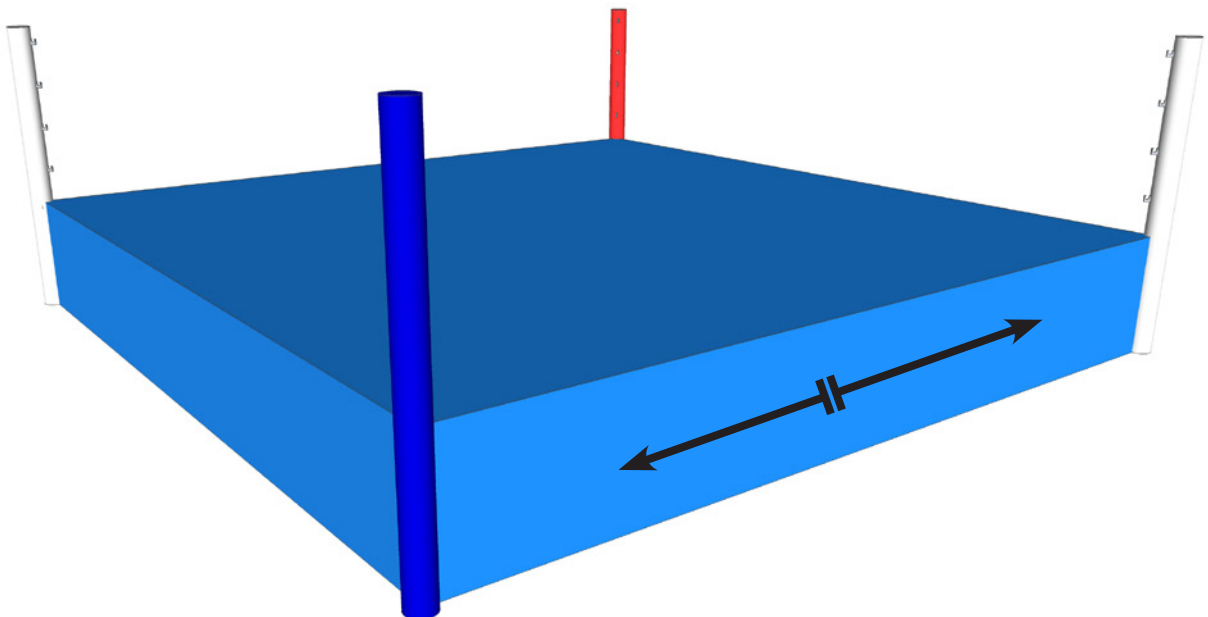

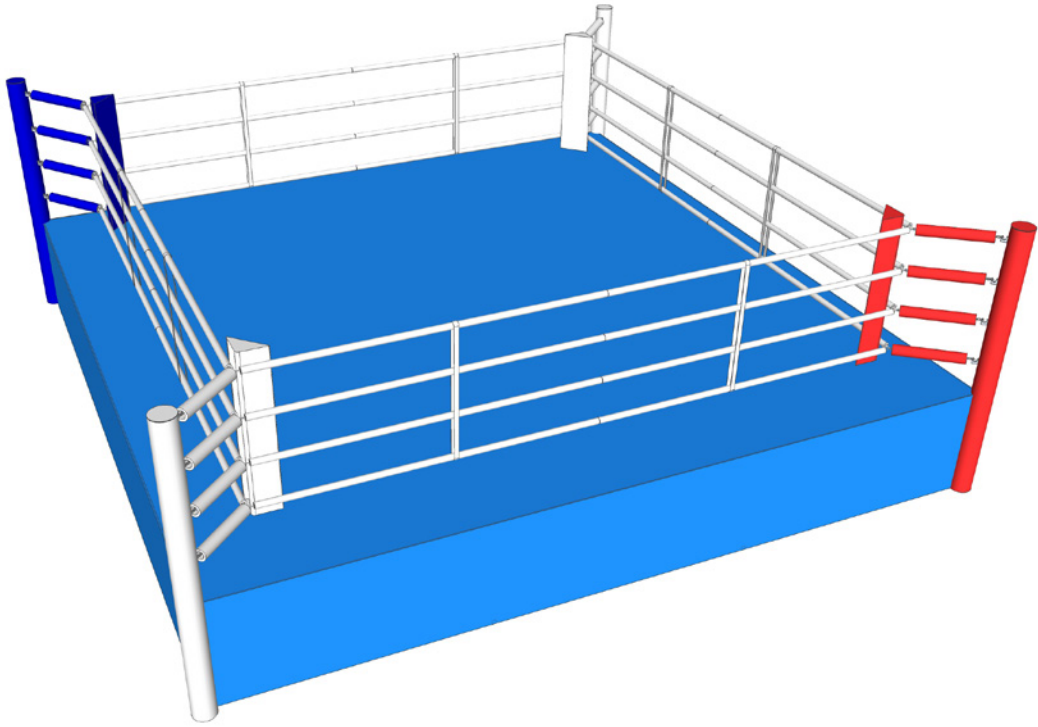

8. Step

Hung the chains as shown on the picture and tighten them with the wire tensioners. Once the ropes, and chains are tightened put on the vertical strips connecting ropes. Also put the soft padded corners on.

